
# POLYWOOD

# Assembly Instructions

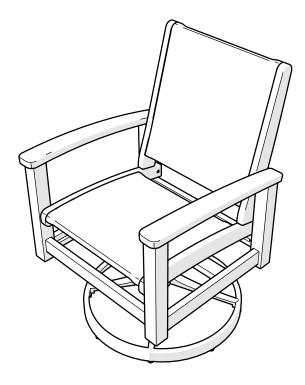



### 20-Year Warranty

To view our full warranty, please visit **polywoodoutdoor.com/warranty** 

Easily register your product using one of the methods below:

#### Text POLYWOOD to 71403


Receive a link to register online

— or —

Register on our website register.polywoodoutdoor.com

— or —

**Send a Picture** Take a photo of the icon below and text it to 71403 (US only)

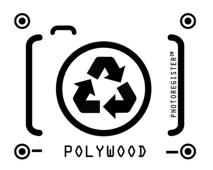

# NO ASSEMBLY REQUIRED

9730 Select Coastal Swivel Rocker



## Having Trouble?

If you have questions or concerns regarding assembly instructions or missing parts, please contact us at (833) 665-6300 or email support@polywoodoutdoor.com



• • • • • • • • • • • •

.....

#### Share your space

We love to see where our furniture ends up — snap a pic and share it on Instagram or Facebook! #polywood



## Watch & Learn

For assembly videos and more, visit **youtube.com/polywood** 



#### Cleaning Tips

Even POLYWOOD gets dirty — here are some ways to help keep it clean:

#### For a quick clean:

Simply wipe down with soap and water.

#### For a deeper clean:

You'll need:

- »  $\frac{1}{3}$  bleach and  $\frac{2}{3}$  water solution
- » clean cloth
- » soft bristle brush

Wipe on solution with your cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.