
NCT3772

Nautical 37" x 72" Dining Table Assembly Instructions

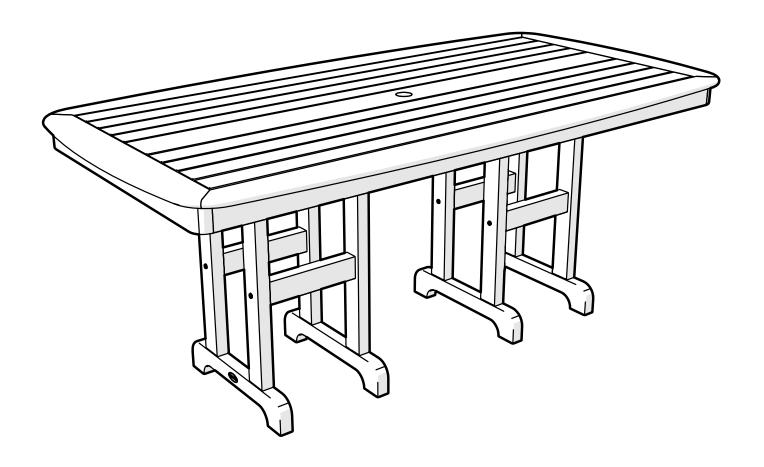 


 




To watch a video of this assembly, visit **youtube.com/polywood**


TOOLS







4mm T-handle Hex Key (included) 3/8" Wrench (not included)

 PARTS

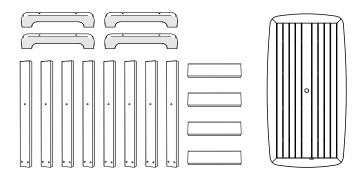





14 X 2.50 HEX WASHER T-A ALCHM

 






1/4-20 x 3-1/4 WAFER SHCS

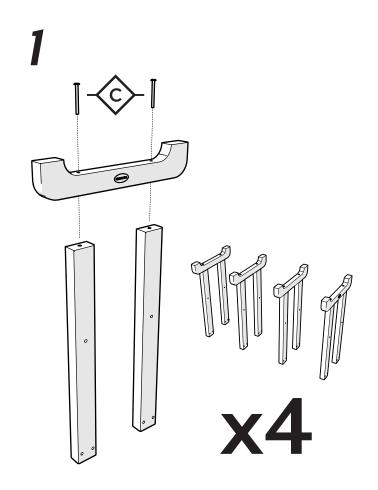

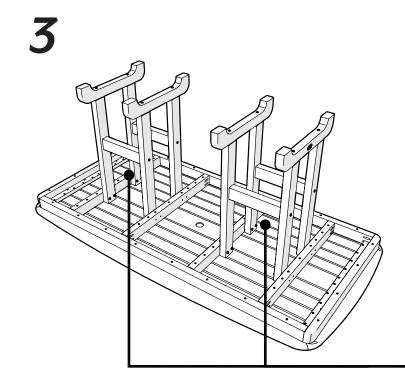

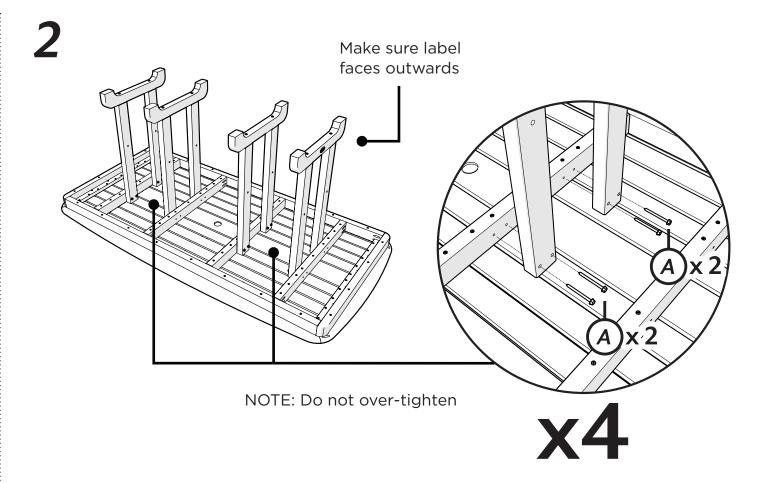

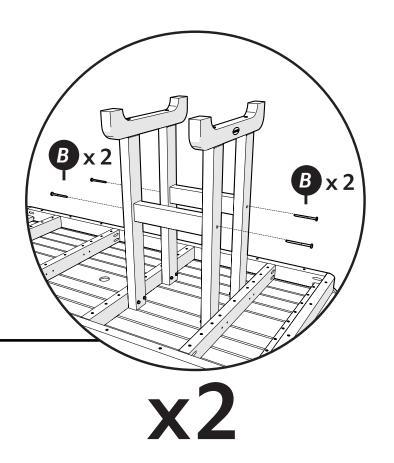

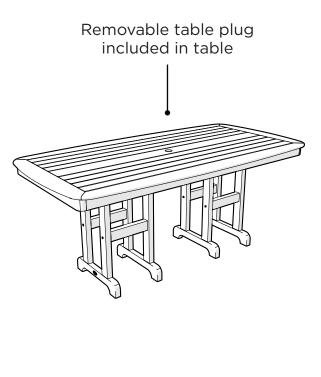





Join the POLYWOOD® Community

Share in the love of outdoor living, recycling, and more...
















To view our full warranty, please visit the warranty page on our website at polywoodinc.com/resources.

If you have questions or concerns regarding assembly instructions or missing parts, please contact us at (877) 457-3284 or email support@polywoodinc.com

POLYWOOD

Assembly Instructions

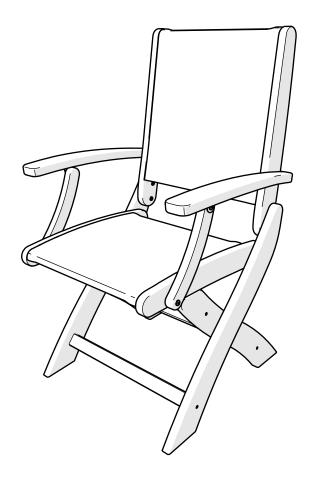

NO ASSEMBLY REQUIRED

9000 Coastal Folding Chair



20-Year Warranty

To view our full warranty, please visit polywoodoutdoor.com/warranty

Easily register your product using one of the methods below:

Text POLYWOOD to 71403

Receive a link to register online

- or -


Register on our website

register.polywoodoutdoor.com

— or —

Send a Picture

Take a photo of the icon below and text it to 71403 (US only)

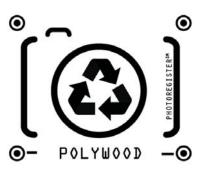





If you have questions or concerns regarding assembly instructions or missing parts, please contact us at (833) 665-6300 or email support@polywoodoutdoor.com





Share your space

We love to see where our furniture ends up — snap a pic and share it on Instagram or Facebook!

#polywood



Watch & Learn

For assembly videos and more, visit youtube.com/polywood



Cleaning Tips

Even POLYWOOD gets dirty — here are some ways to help keep it clean:

For a quick clean:

Simply wipe down with soap and water.

For a deeper clean:

You'll need:

- » 1/3 bleach and 2/3 water solution
- » clean cloth
- » soft bristle brush

Wipe on solution with your cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.