(20)

20-year warranty

View our full warranty: polywoodoutdoor.com/warranty

X

Having trouble?

If you have questions or concerns regarding assembly instructions or missing parts, please contact us at hello@polywoodoutdoor.com or (833) 665-6300

\checkmark

Cleaning tips

For a Quick Clean:

Simply wipe down with soap and water.

For a Deep Clean:


Wipe on ¹/₃ bleach and ²/₃ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:

Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a ½ bleach and ⅔ water solution and scrub with a softbristle brush. Hose down to rinse.

POLYWOOD

Assembly Instructions

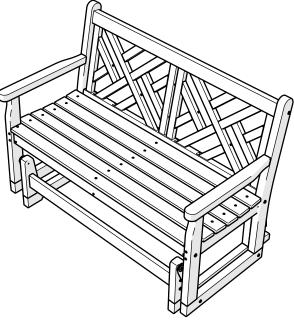

Thank You

Thank you for choosing POLYWOOD! We hope our furniture helps create a gathering place for you and your loved ones to enjoy for many years to come!

.....

Reach Out

Let us know how we're doing: hello@polywoodoutdoor.com (833) 665-6300

Stay Connected

Be the first to hear about new products, giveaways, and more by signing up for our email list: **polywoodoutdoor.com/subscribe**

CDG48 Chippendale 48" Glider



For assembly tips and videos visit: polywoodoutdoor.com/assembly

Share your space

We love to see where our furniture ends up — snap a pic and tag it on Instagram or Facebook for your chance to be featured on our social channels! #polywood #rethinkoutdoor



facebook.com/polywoodoutdoor





pinterest.com/polywood




youtube.com/polywood




Did you know?

POLYWOOD was the original outdoor furniture made from recycled materials.

Learn more about our story: genuinePOLYWOOD.com

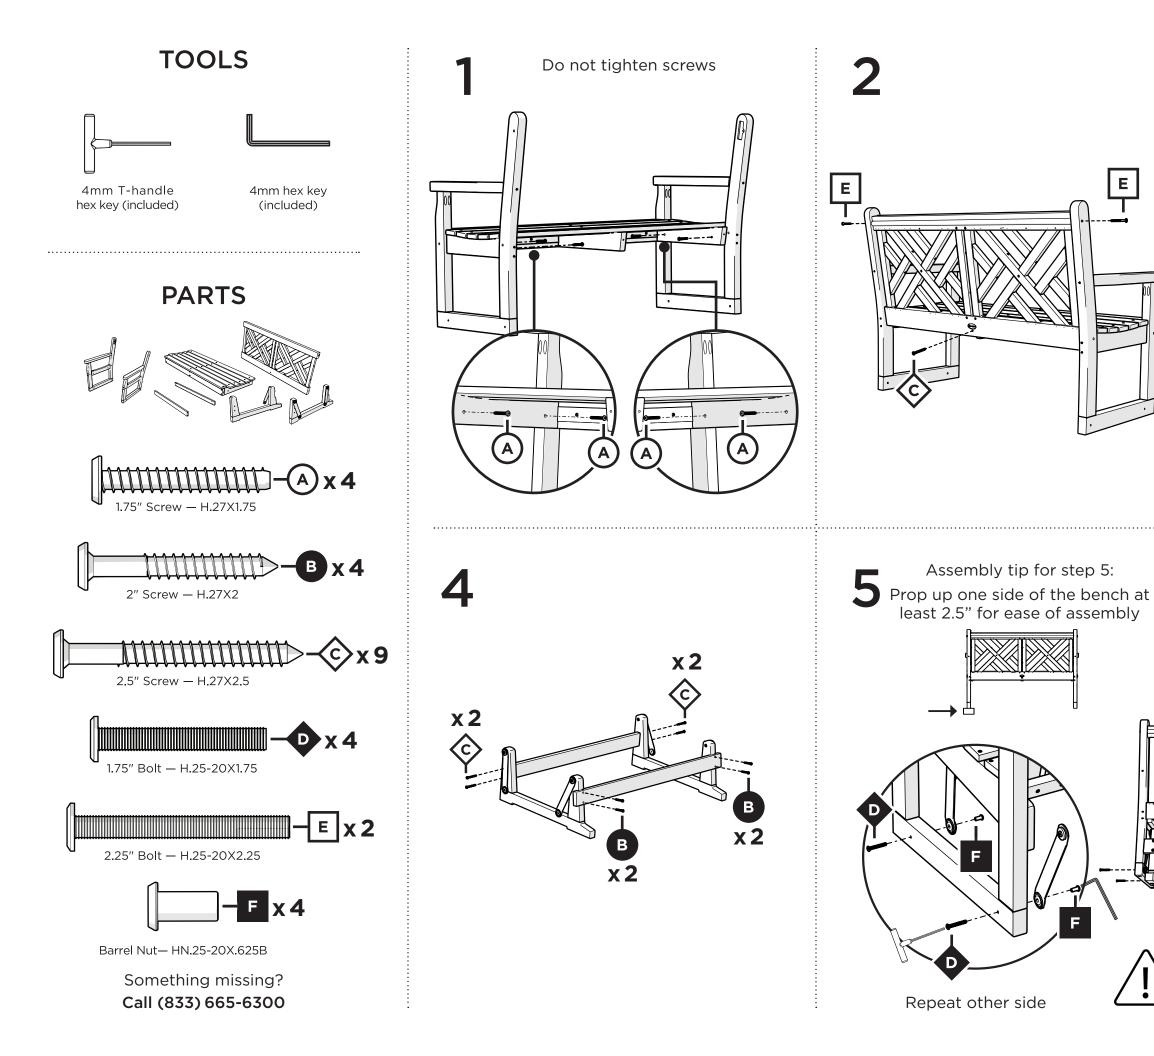

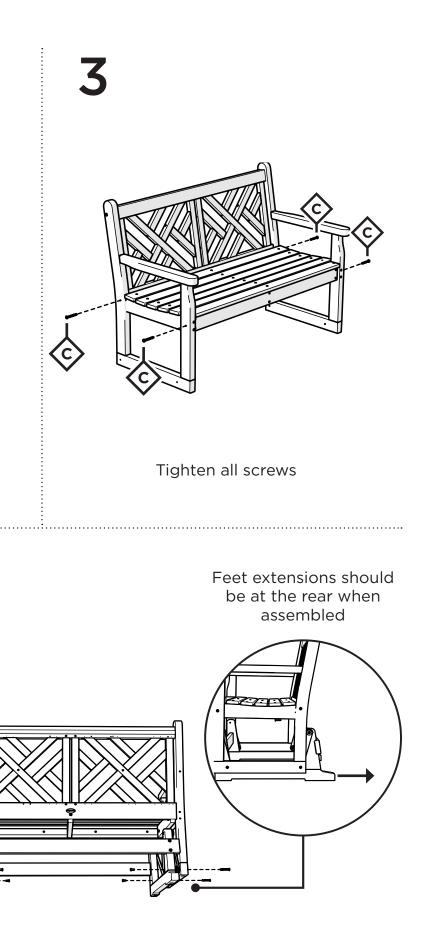

Installing the base backwards could result in the glider tipping over unexpectedly Use on level ground only