Assembly Instructions





Thank you for choosing POLYWOOD!

We hope our furniture helps create a gathering

place for you and your loved ones to enjoy

for many years to come!

We love to see where our furniture ends up — snap a pic and tag it on Instagram or Facebook for your chance to be featured on our social channels! #polywood #rethinkoutdoor

Share your space



facebook.com/polywoodoutdoor



@POLYWOOD



pinterest.com/polywood



youtube.com/polywood



Reach Out

Let us know how we're doing: hello@polywoodoutdoor.com (833) 665-6300



Stay Connected

Be the first to hear about new products, giveaways, and more by signing up for our email list: polywoodoutdoor.com/subscribe

Watch & Learn

For assembly tips and videos visit:

polywoodoutdoor.com/assembly



Did you know?

POLYWOOD was the original outdoor furniture made from recycled materials.

> Learn more about our story: genuinePOLYWOOD.com





Having trouble?

20-year warranty

If you have questions or concerns regarding assembly instructions or missing parts, please contact us at hello@polywoodoutdoor.com or (833) 665-6300



Cleaning tips

For a Quick Clean:


Simply wipe down with soap and water.

For a Deep Clean:

Wipe on 1/3 bleach and 2/3 water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:

Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a 1/3 bleach and 2/3 water solution and scrub with a softbristle brush. Hose down to rinse.

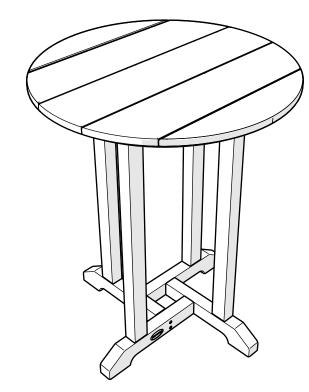


RT124, RT224 24" Round Farmhouse **Bistro Table**


polywoodoutdoor.com




4mm T-handle hex key (included)

 
PARTS

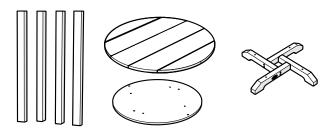





.81" Screw - H.27X.81

 


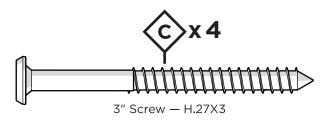

Something missing? Call (833) 665-6300

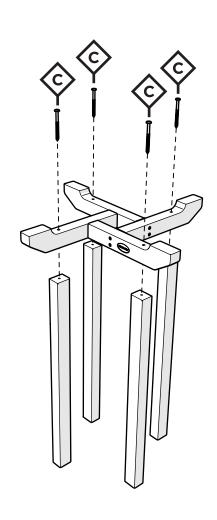


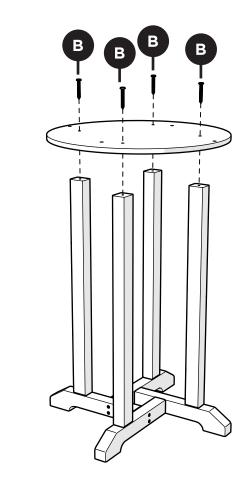

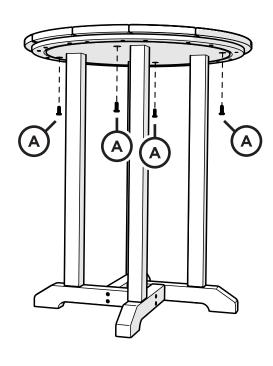

POLYWOOD

Assembly Instructions

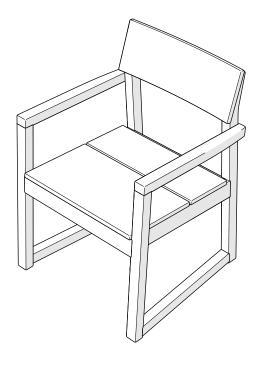

NO ASSEMBLY REQUIRED

EMD200 EDGE Dining Arm Chair



Thank you for choosing POLYWOOD!

We hope our furniture helps create a gathering place for you and your loved ones to enjoy for many years to come!



Reach Out

Let us know how we're doing: hello@polywoodoutdoor.com (833) 665-6300



Stay Connected

Be the first to hear about new products, giveaways, and more by signing up for our email list: polywoodoutdoor.com/subscribe



Watch & Learn

For assembly tips and videos visit: polywoodoutdoor.com/assembly

Share your space

We love to see where our furniture ends up — snap a pic and tag it on Instagram or Facebook for your chance to be featured on our social channels!

#polywood #rethinkoutdoor



facebook.com/polywoodoutdoor



@POLYWOOD



pinterest.com/polywood



youtube.com/polywood







Did you know?

POLYWOOD was the original outdoor furniture made from recycled materials.

Learn more about our story: genuinePOLYWOOD.com



20-year warranty

View our full warranty: polywoodoutdoor.com/warranty



Having trouble?

If you have questions or concerns regarding assembly instructions or missing parts, please contact us at hello@polywoodoutdoor.com or (833) 665-6300



Cleaning tips

For a Quick Clean: Simply wipe down with soap and water.

For a Deep Clean:

Wipe on bleach and water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:
Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a bleach and water solution and scrub with a softbristle brush. Hose down to rinse.