# **POLYWOOD**

Assembly Instructions



## 20-year warranty

View our full warranty: polywoodoutdoor.com/warranty



## Having trouble?

If you have questions or concerns regarding assembly instructions or missing parts, please contact us at hello@polywoodoutdoor.com or (833) 665-6300



#### Cleaning tips

#### For a Quick Clean:

Simply wipe down with soap and water.

#### For a Deep Clean:

Wipe on ½ bleach and ¾ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

#### For a High-Power Clean:

Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a  $\frac{1}{3}$  bleach and  $\frac{2}{3}$  water solution and scrub with a softbristle brush. Hose down to rinse.



## L1D84, L1R84, L1B84

For Use With Rectangle Plank Tables-PL84



Thank you for choosing POLYWOOD!

We hope our furniture helps create a gathering place for you and your loved ones to enjoy for many years to come!



#### Reach Out

Let us know how we're doing: hello@polywoodoutdoor.com (833) 665-6300



## Stay Connected

Be the first to hear about new products, giveaways, and more by signing up for our email list: polywoodoutdoor.com/subscribe



#### Watch & Learn

For assembly tips and videos visit: polywoodoutdoor.com/assembly

#### Share your space

We love to see where our furniture ends up — snap a pic and tag it on Instagram or Facebook for your chance to be featured on our social channels!

#polywood #rethinkoutdoor



facebook.com/polywoodoutdoor



@POLYWOOD



pinterest.com/polywood



youtube.com/polywood





## Did you know?

POLYWOOD was the original outdoor furniture made from recycled materials.

Learn more about our story: genuinePOLYWOOD.com







 
3/8" wrench (not included)

4mm T-handle hex key (included)

## **PARTS**

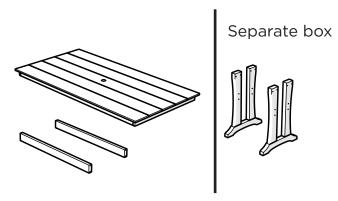


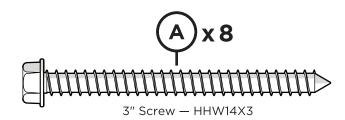






Something missing? Call (833) 665-6300

Align each screw with a pilot hole and partially thread by hand before fully tightening

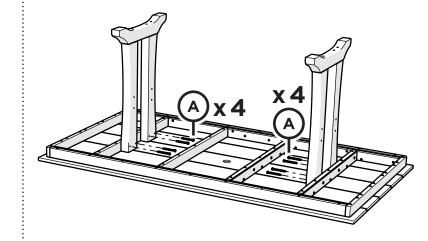

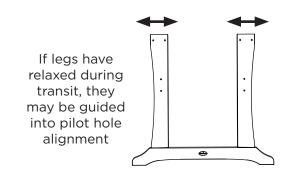

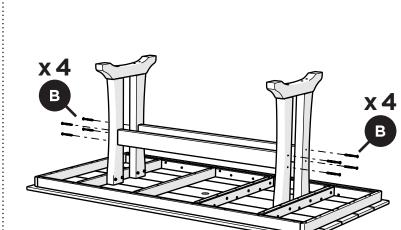

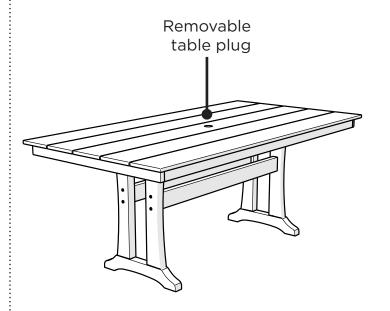

**POLYWOOD** 

## **POLYWOOD**

Assembly Instructions



NO ASSEMBLY REQUIRED

CC4423
Captain Dining
Chair



Thank you for choosing POLYWOOD!

We hope our furniture helps create a gathering place for you and your loved ones to enjoy for many years to come!



Reach Out

Let us know how we're doing: hello@polywoodoutdoor.com (833) 665-6300



Stay Connected

Be the first to hear about new products, giveaways, and more by signing up for our email list: polywoodoutdoor.com/subscribe



Watch & Learn

For assembly tips and videos visit: polywoodoutdoor.com/assembly

#### Share your space

We love to see where our furniture ends up — snap a pic and tag it on Instagram or Facebook for your chance to be featured on our social channels!

#polywood #rethinkoutdoor



facebook.com/polywoodoutdoor



@POLYWOOD



pinterest.com/polywood



youtube.com/polywood







### Did you know?

POLYWOOD was the original outdoor furniture made from recycled materials.

Learn more about our story: genuinePOLYWOOD.com



### 20-year warranty

View our full warranty: polywoodoutdoor.com/warranty



#### Having trouble?

If you have questions or concerns regarding assembly instructions or missing parts, please contact us at hello@polywoodoutdoor.com or (833) 665-6300



#### Cleaning tips

#### For a Quick Clean:

Simply wipe down with soap and water.

#### For a Deep Clean:

Wipe on ½ bleach and ½ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

#### For a High-Power Clean:

Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a  $\frac{1}{3}$  bleach and  $\frac{2}{3}$  water solution and scrub with a softbristle brush. Hose down to rinse.