POLYWOOD

Assembly Instructions
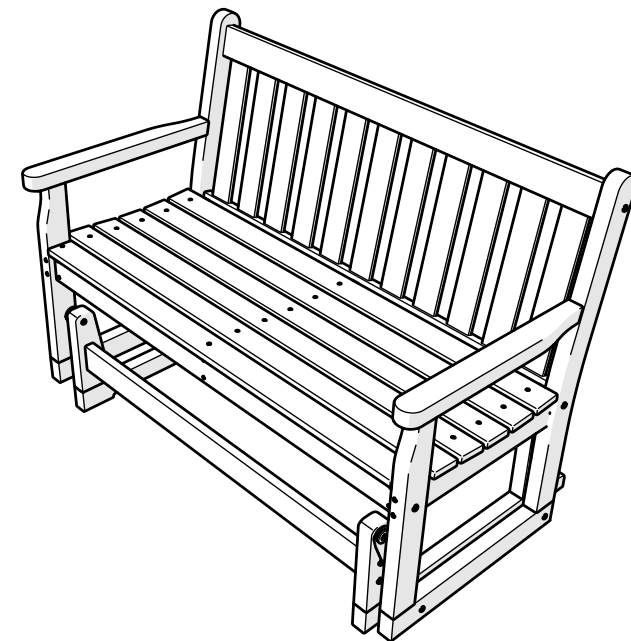
TGG48
Traditional Garden 48"
Glider

Having trouble?

If you have questions or concerns regarding assembly instructions or missing parts, please contact us at **hello@polywoodoutdoor.com** or **(833) 665-6300**

Cleaning tips

For a Quick Clean:
Simply wipe down with soap and water.

For a Deep Clean:
Wipe on ⅓ bleach and ⅔ water solution with a clean cloth and let it sit on the lumber for a few minutes (this will not affect the color). Then, loosen any dirt and debris that may catch in surface grooves with a soft bristle brush; hose down to rinse.

For a High-Power Clean:
Use a pressure power washer (not exceeding 1,500 psi) to spray off dirt and debris. Apply a ⅓ bleach and ⅔ water solution and scrub with a soft-bristle brush. Hose down to rinse.

Thank You

Thank you for choosing POLYWOOD! We hope our furniture helps create a gathering place for you and your loved ones to enjoy for many years to come!

Reach Out

Let us know how we're doing:
hello@polywoodoutdoor.com
(833) 665-6300

Stay Connected

Be the first to hear about new products, giveaways, and more by signing up for our email list: **polywoodoutdoor.com/subscribe**

Watch & Learn

For assembly tips and videos visit:
polywoodoutdoor.com/assembly

Share your space

We love to see where our furniture ends up — snap a pic and tag it on Instagram or Facebook for your chance to be featured on our social channels!
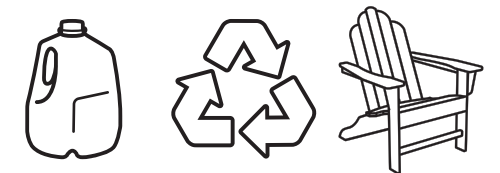**#polywood   #rethinkoutdoor**

facebook.com/polywoodoutdoor
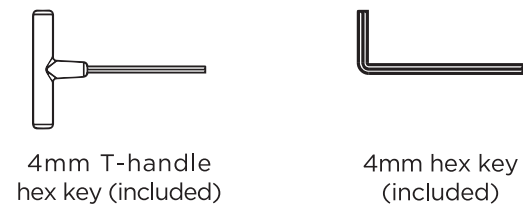
@POLYWOOD

pinterest.com/polywood

youtube.com/polywood

Did you know?

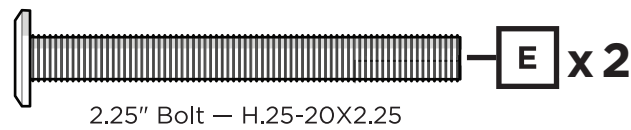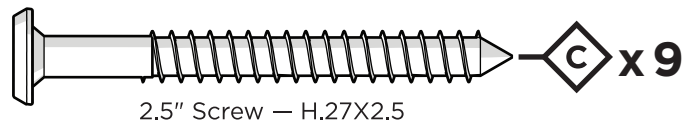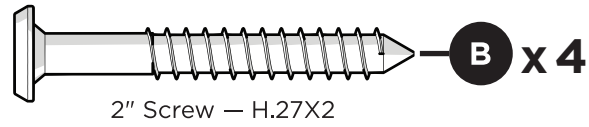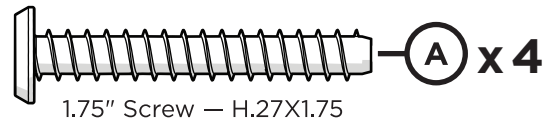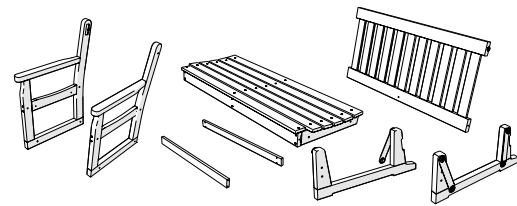POLYWOOD was the original outdoor furniture made from recycled materials.

Learn more about our story:
genuinePOLYWOOD.com

TOOLS

4mm T-handle hex key (included)

4mm hex key (included)

PARTS

(A) **x 4**
1.75" Screw — H.27X1.75

(B) **x 4**
2" Screw — H.27X2

(C) **x 9**
2.5" Screw — H.27X2.5

(D) **x 4**
1.75" Bolt — H.25-20X1.75
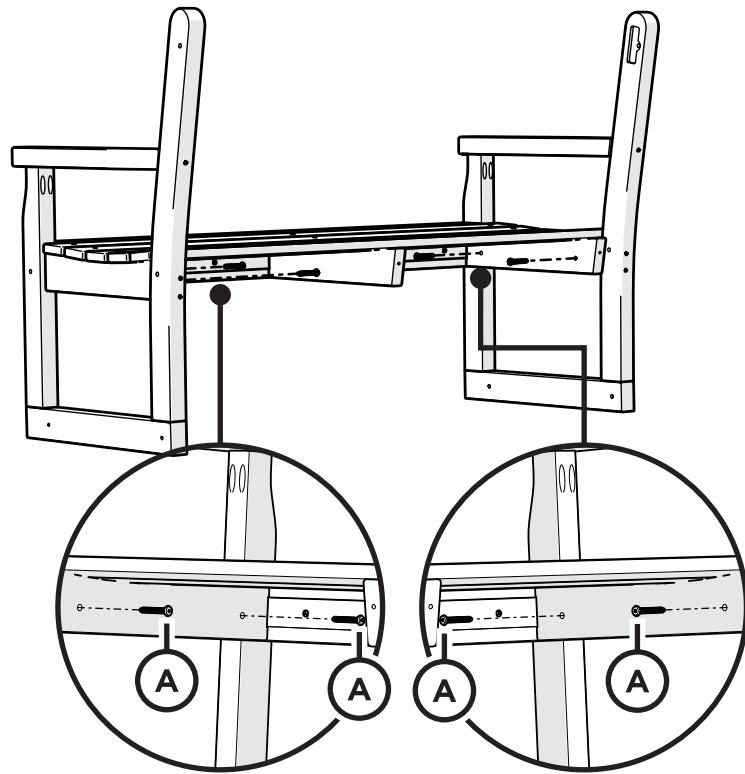
(E) **x 2**
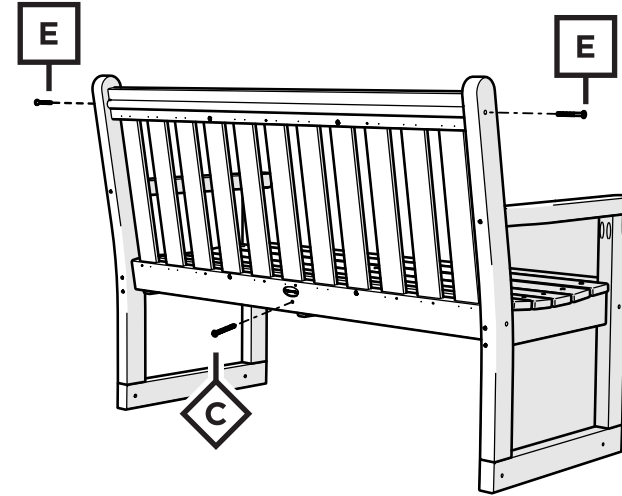2.25" Bolt — H.25-20X2.25
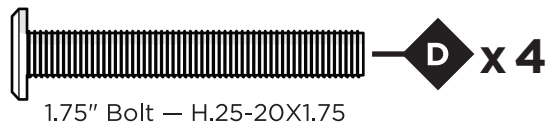
(F) **x 4**
Barrel Nut— HN.25-20X.625B

Something missing?
Call (833) 665-6300

1

Do not tighten screws

2

3
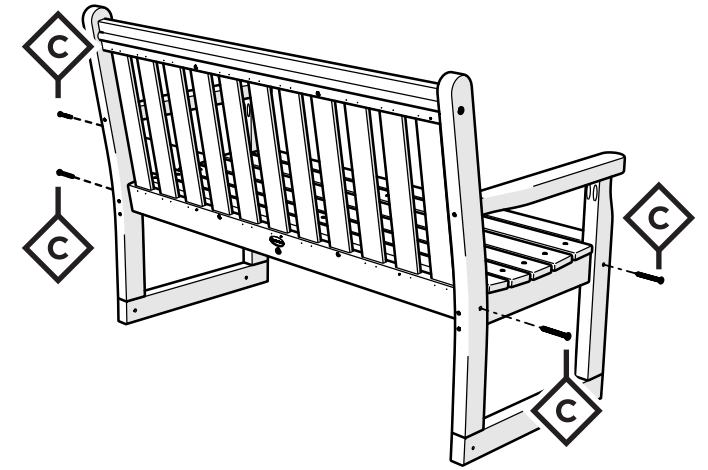
Tighten all screws

4

x 2 C
x 2 C
x 2 B
x 2 B
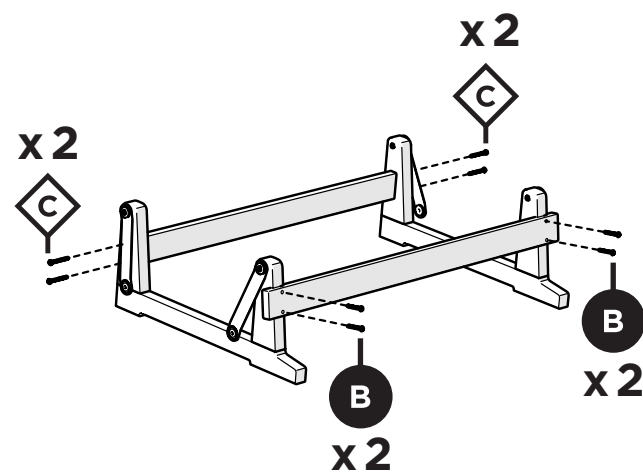
5

Assembly tip for step 5:
Prop up one side of the bench at least 2.5" for ease of assembly

D
F
F
D
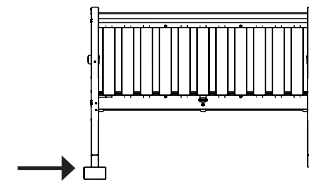
Repeat other side

Feet extensions should be at the rear when assembled
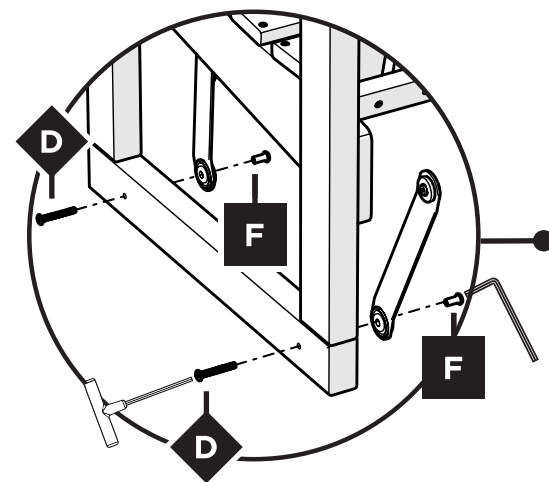
Installing the base backwards could result in the glider tipping over unexpectedly

Use on level ground only